



Sony Digital Camera FD-97 Operation

Camera must be reserved/checked-out in the LRC/ 2 day limit

The **IMS Dept** is proud to offer the Mavica Digital MVC-FD-97 Camera for Staff/Faculty use. Spice up your Web site pages, PowerPoint presentations, E-mail & more. So lets get started! First a few simple things. The primary difference between the FD-95 and the FD 97 is that the FD-97 can use a memory stick. The use of the memory stick allows the user to have a greater reserve of available space or memory for more pictures. This is similar to the CD-R of the Mavica CD-1000 but without the necessity of initializing and finalizing the CD

Insert floppy disk into camera. Slide POWER Bar down to turn on power. (The POWER lamp lights up) The floppy disk will make a clinking sound. Check to see if the battery is charged before using. A full charge takes 150mins. Remaining battery time indicator is located in the upper right hand corner of LCD screen.

Operation of the FD-97 is primarily the same as the FD-95 with the exception of selecting "floppy disk" or "memory stick" as your recording medium. The switch is located to the right of the LCD screen and is marked "MS" or "FD".

1. Recording still images-

- Set **PLAY/STILL/MOVIE** switch to **STILL**.
Now you are ready to shoot a picture.
- **Press the shutter button halfway down.**
The AE (auto exposure) indicator (little green light) flashes. When the AWB (auto white balance) and AF (auto focus) are frozen, the AE light stops flashing.
- **Now press the shutter button fully down.**
The image is recorded on the disk. Note when the image is recording on the disk, the word **RECORDING** flashes on the LCD screen. Do not shake or strike the camera while this is showing. Also do not turn camera off.



2. Playing back still Images-

- To watch the recorded images on the LCD screen, slide the **POWER Bar** to the right to turn on the power (the POWER lamp lights up)
Insert the floppy disk until it clicks.
- Set **PLAY/STILL/MOVIE** to **PLAY**. The **ACCESS** light flashes and the last recorded image appears on the LCD screen. To select the recorded image with the **CONTROL BUTTON** you can execute the functions by pressing, the upper, lower, left or right side of the control button. When an item is selected in the menu, the color of the item changes from blue to yellow. To enter your selection, press the center of the control button. To display 6 recorded images at a time, Press **INDEX**.